



MM 7 ft Pre-Lit TWINKLING BUCK | Instruction Manual Addendum

Sam's Club Call Center: 1-888-746-7726



Manufacturer's Call Center: 1-800-353-3116



Use the following checklist to update your 7 ft Pre-Lit Twinkling Buck:

- ✓ Identify connectors at base of neck.
- ✓ Assembly of connectors.
- ✓ Test assembly is correct.
- ✓ Apply color coded labels to the wires at the base of the connectors.
- ✓ Apply the cord tag sticker to the lead in wire.




WARNING: Mixing the wires can cause burns. The wires must be color-coded and match when connected.



MM 7 ft Pre-Lit TWINKLING BUCK | Instruction Manual Addendum

Sam's Club Call Center: 1-888-746-7726

Manufacturer's Call Center: 1-800-353-3116

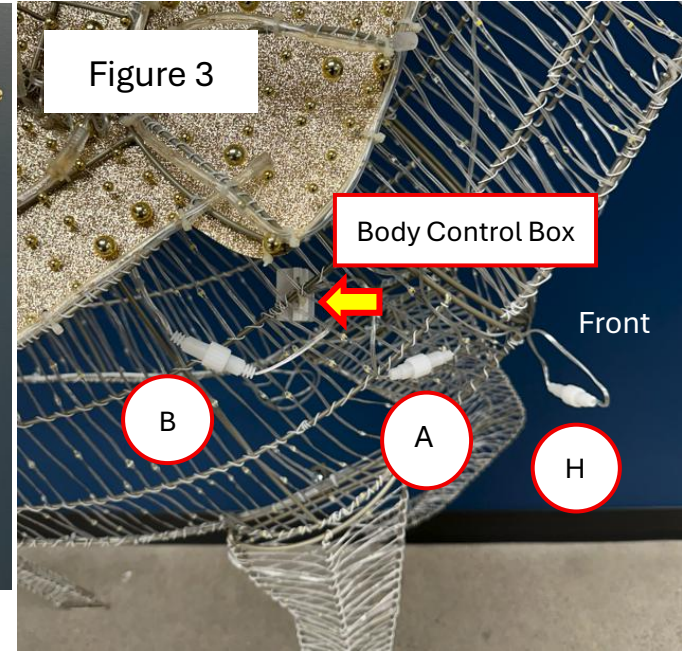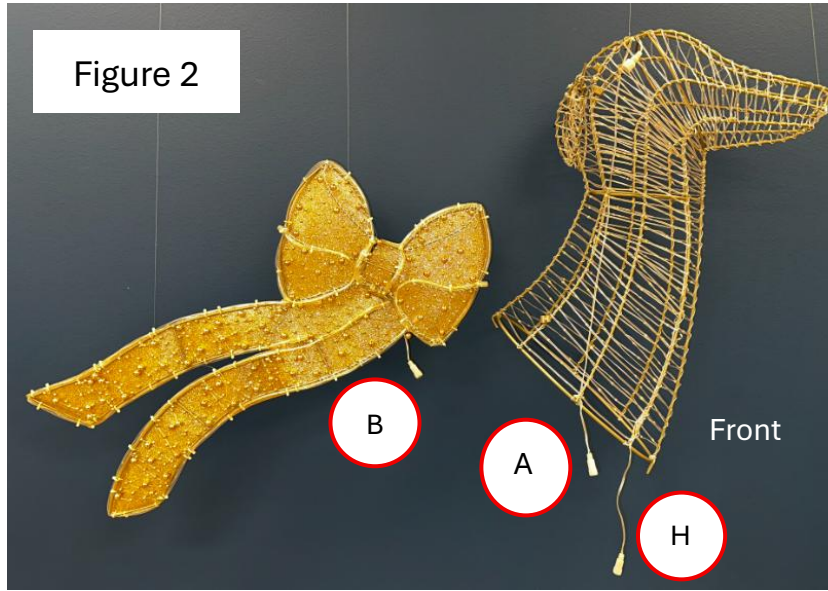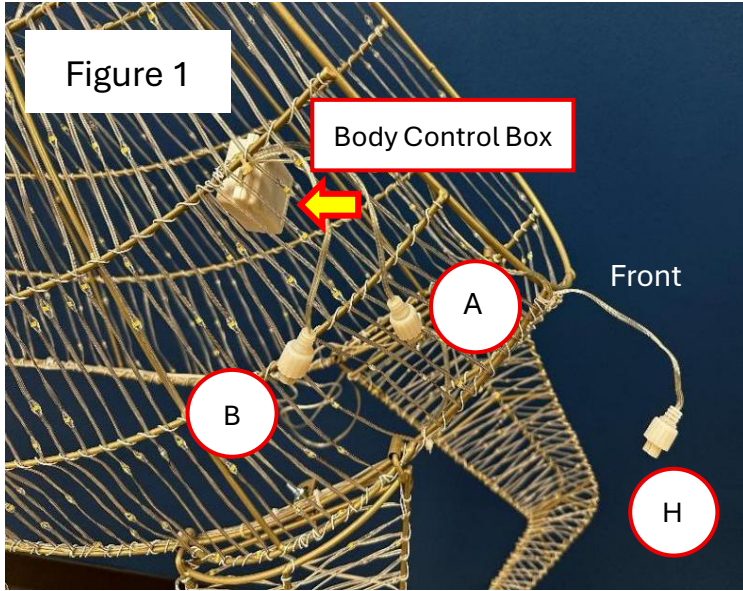

Connector Identification

Connector H:
Head

Connector B:
Bow

Connector A:
Antlers

Connector Locations on Body (see figure 1)

- **Connector H** is a longer wire, approximately 7.5 inches. This wire is attached to the frame and located on the front of the buck (bottom of neck area).
- **Connector A** is a shorter wire, approximately 6 inches connected to the body control box and hanging outside the body.
- **Connector B** is a shorter wire, approximately 6 inches also connected to the body control box also hanging outside the body.

Note: Only connectors A and B can be used interchangeably.

Connector Locations on Bow and Head (see figure 2).

- **Connector B** is for the lights on the bow and located on the back of the bow.
- **Connector H** is for the lights on the head and located at the bottom front side of the buck head (front side of bottom of neck area) attached to the frame and approximately 5 inches.
- **Connector A** is for the lights on the antlers and located at the bottom side of the buck head approximately 4 inches as shown on the head in figure 2.

WARNING: Mixing Connector H with Connectors A or B can cause burns.

Connect H to H, A to A and B to B using the descriptions on the left and the figures above for reference. See figure 3 for connections.

Testing

1. Plug in the power adaptor into a 120V outlet.
2. Push the button on the main control box until all lights are turned off. You are now in "off" mode (See Figure 4).
3. Push the button on the main control box two (2) more times to put the Buck in "Twinkle" mode.

IMPORTANT: If the main control box is set to "Steady" mode, you won't be able to confirm the connections are correct.

4. **If the lights on the head portion of the Buck start flashing, this is incorrect.**

Revisit steps 1, 2 and 3 above to identify the correct connectors and adjust accordingly. **Connector H that comes from the lights on the head must be connected to Connector H on the body.**

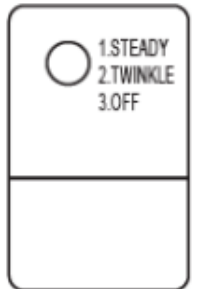


Figure 4

MM 7' Pre-Lit TWINKLING BUCK | Instruction Manual Addendum

Sam's Club Call Center: 1-888-746-7726

Manufacturer's Call Center: 1-800-353-3116

Application of Color Coding markers

After testing the Buck apply the color-coded sticker as noted below.

Head "H" Connectors

Apply the blue sticker at the base of both Head "H" connectors (refer to illustrations above for location) by:

- Peeling the blue sticker from the sheet.
- Stick one end to the wire at the base of the connector and wrap the blue sticker around the wire until all the sticker is attached and repeat for the other H connector. See Figure 5.

Antlers "A" Connectors

Apply the black sticker at the base of both Antlers "A" connectors (refer to illustrations above for location) by repeating steps a and b above.

Bow "B" Connectors

Apply the yellow sticker at the base of both Bow "B" connectors (refer to illustrations above for location) by repeating steps a and b above.

See Figure 6 for completed color coding stickers on connectors H, A and B.

Application of Cord Tag Sticker

Apply cord tag warning sticker onto the H wire (blue color coded connector wire) by folding the tag over the wire so that it extends like a flag from the wire. See Figure 7.

Future Year Assembly

Only plug the same color connectors together. See figure 6.

Do not intermix connectors from different parts, refer to the locations of the connectors shown in figures 1, 2 and 3 on the previous page.

WARNING: Mixing the wires can cause burns. The wires must be color-coded and match when connected.






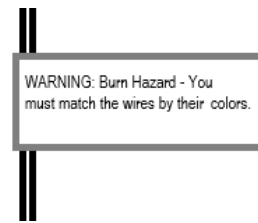


Figure 7

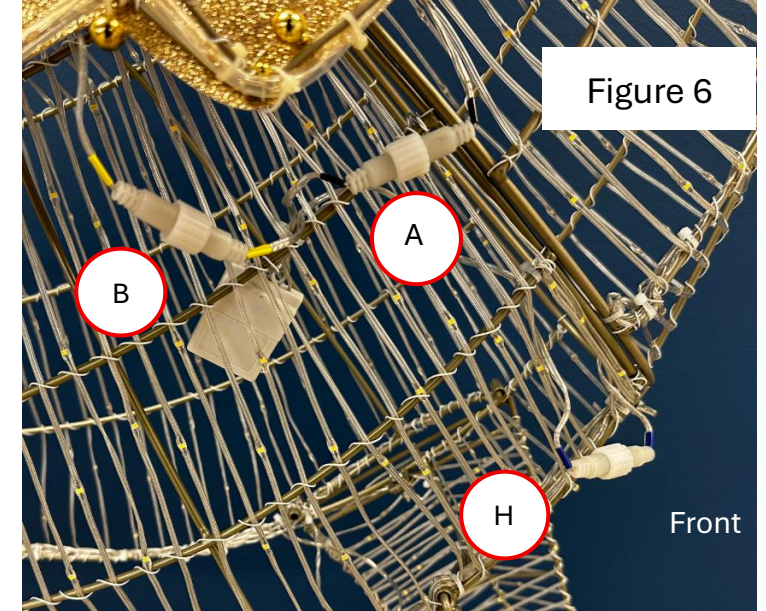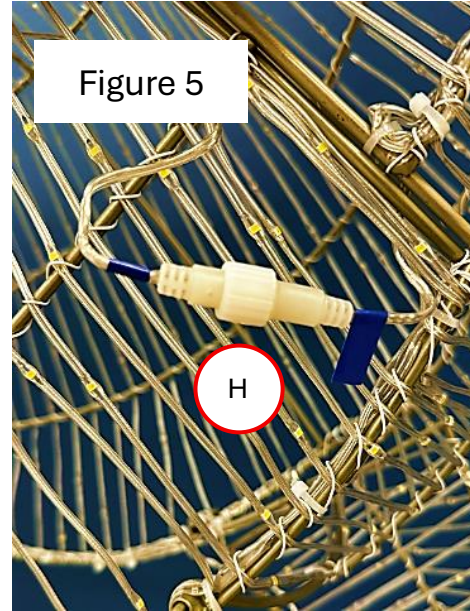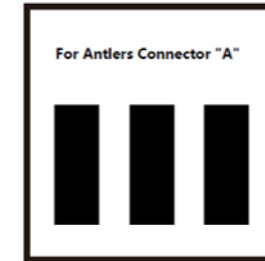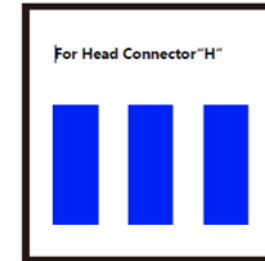

Example of Sticker Sheets

Note – 1 spare sticker per color is provided.

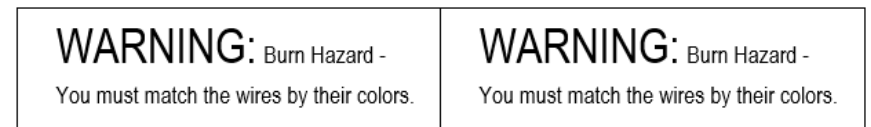

Example of Cord Tag Warning Sticker